
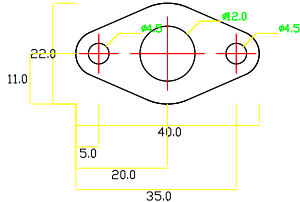
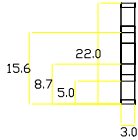


MANUFACTURING NOTES:

- 1. ALL HOLES ARE ORIENTED ALONG A SINGLE AXIS, SIMPLIFYING MACHINING SETUP AND REDUCING THE NEED FOR MULTIPLE PART RE-ORIENTATIONS.
- 2. MULTIPLE HOLE DIAMETERS (4.5MM, 10MM, 12MM, 22MM) REQUIRE CAREFUL TOOL MANAGEMENT AND SEQUENCING TO OPTIMIZE CYCLE TIME AND PREVENT ERRORS.
- 3. THE 4.5MM HOLES SHOULD BE PILOT DRILLED PRIOR TO FINAL DRILLING TO MAINTAIN POSITIONAL ACCURACY AND IMPROVE HOLE QUALITY.
- 4. ENSURE ADEQUATE CHIP EVACUATION, ESPECIALLY WHEN DRILLING THE LARGE 22MM DIAMETER HOLES, TO PREVENT TOOL WEAR AND IMPROVE SURFACE FINISH.
- 5. THE 2.25MM BLEND RADII REQUIRE PRECISE CONTOURING WITH APPROPRIATELY SIZED END MILLS TO ENSURE SMOOTH TRANSITIONS AND AVOID STRESS CONCENTRATIONS.
- 6. LEVERAGE PART SYMMETRY FOR EFFICIENT FIXTURING AND CNC PROGRAMMING, POTENTIALLY ALLOWING FOR MIRRORED MACHINING OPERATIONS.

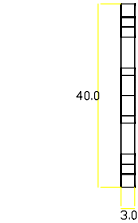

PART: AXIAL BORE MOUNTING FLANGE

UNITS: MM

SCALE 1 : 1

DATE: 2026-05-25